


Panasonic

Wireless Phone



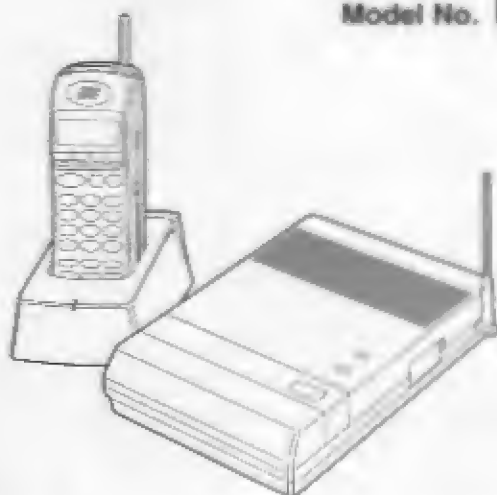


Operating Instructions

Model No. **KX-T7885**



Please read these Operating Instructions before using the unit and save for future reference.

Accessories (Included)

Handset	One	Base Unit	One	Charging Unit	One
AC Adaptor	Telephone Line Cord	Battery*	Handset Clip	Wall Mounting Plate	
					
Two	One	One	One	One	

NOTE:


- The KX-T7885 can be used as a single line telephone (SLT) for home use. This is called "SLT mode" in this manual. The KX-T7885 can be connected to the Panasonic KX-T, KX-TA or KX-TD series. This is called "EMISS mode" in this manual.
- To order accessories, call toll free 1-800-332-5368.
- *Battery: Please use only Panasonic KX-A276 battery.

Thank you for purchasing a Panasonic Wireless Phone.

FOR BEST PERFORMANCE

Noise


Calls are transmitted between the base unit and the handset using wireless radio waves. For maximum distance and noise free operation, the recommended base unit location is:

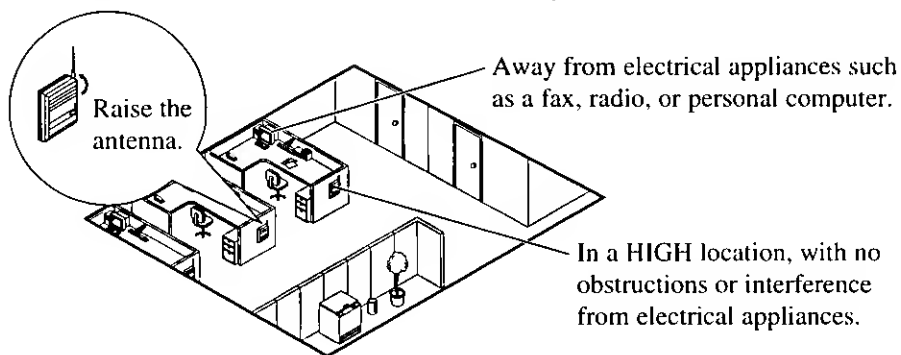


- Wireless telephones, except for the 900MHz telephone, can be used together.

Operating Distance

 The handset should always be at least 1 m away from the base unit.



 When using more than two base units, place the base units at least 1 m away from each other, or else proper radio transmission cannot be obtained.



Battery Charging

You must charge the battery for about 1.5 hours before initial use.

When charging is completed, the charge indicator will turn from red to green.

CONTENTS

Getting Started	4
Location of Controls	4
Installing and Charging the Battery	6
Location of Controls and Connection for the Base Unit	7
Before using KX-T7885 in EMSS mode	8
Power ON/OFF	9
About the LCD	10
Controlling the Volume	11
Making Calls	13
Calling	13
In EMSS mode	13
In SLT mode	13
Dialing the last number you dialed (Last Number Redial)	14
Speed Dialing	15
One-touch Dialing	16
Receiving Calls	17
In EMSS mode	17
In SLT mode	17
During a Conversation	18
Placing a Call on Hold	18
Three-party Conversation (Conference)	18
Transferring a Call	19
Message Waiting	20
Leaving a call notification	20
Call back when you receive a notification	21
Useful Features	22
Forwarding your calls (Call Forwarding [FWD])	22
Preventing others from disturbing you (Do Not Disturb [DND])	24
Flash	25
Key Lock	25
Station Programming	26
Station Programming in SLT mode	26
PBX Station Programming	26
Handset Programming	27
Programming Instructions	27
Vibrator and Ringer	28
Ringer Pattern Selection	28
Key Click Tone Set	29
Up/Down Key Assignment	29
Automatic Flexible Key Selection	30
LCD Contrast	30
Back Light	31
Flexible Key Name Set	32
Others	33
Wall Mounting	33
Installing the Handset Clip	33
Replacing the Battery	34
Locating the Handset from the Base Unit	35
Troubleshooting	36
Important Safety Instructions	37
Features List	42

GETTING STARTED

LOCATION OF CONTROLS

► Handset

Ringing Indicator

Flashes green when an incoming call is received.

Volume Control Button

Used to select the ringer or receiver volume or used to select the display of Flexible key.

(OFF) Button

Used to end calls or exit the programming mode.

(Talk) Button

Used to make, receive or end calls.

(AUTO) (Auto/Store) Button

Used for System Speed Dialing or storing program changes.

(INT) (Intercom) Button

Used to make or receive intercom calls.

(FUNC) (Function/Keylock) Button

Used to enter into the Function mode or access features by pressing additional keys or lock/unlock the key in idle status.

Antenna

Liquid Crystal Display

Flexible CO Buttons (F1 through F12)

Used to seize a CO line or access one of several features.

(Transfer/Clear) Button

Used to clear incorrect digits while entering numbers, and transfer a call to another extension.

(LCD) (LCD/Select) Button


Used to refresh the LCD or select the item in programming mode.

(HOLD) (Hold) Button

Used to place a call on hold.

(REDIAL) (Redial) Button

Used to redial the last number dialed.

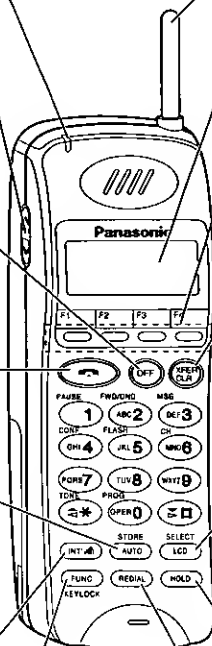

GETTING STARTED

COMBINATION BUTTONS

Pause Button (FUNC)

Used to insert a pause in numbers.

FWD/DND Button (FUNC)

Used to set the Call Forwarding or Do Not Disturb (DND) features.

Message Button (FUNC)

Used to leave a notification to the called party or call back the message sender (Message Waiting).

Conference Button (FUNC)

Used to establish a three party conversation.

Flash Button (FUNC)


Used to disconnect a current call and make another call.

CH Button (FUNC)

Used to change the communication radio channel when encountering interference from another unit.

Program Button (FUNC)



Used to enter the programming mode.

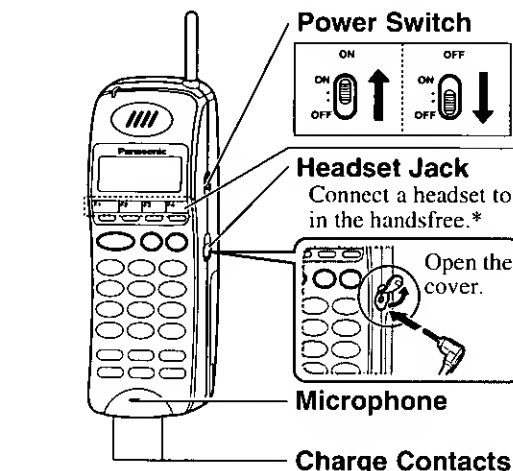

Numbering Sheet

You may write down the names related to the one-touch dialing on this sheet.


* The headset is optional.
Please use only Panasonic KX-TCA80 or KX-TCA90 headset.
To order, call 1-800-332-5368.

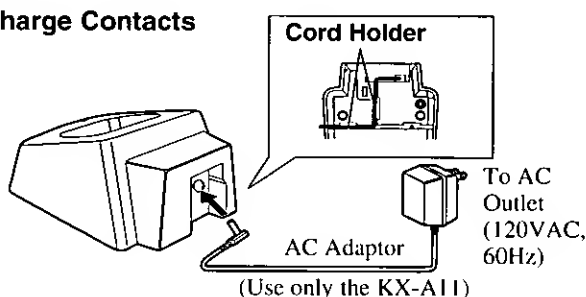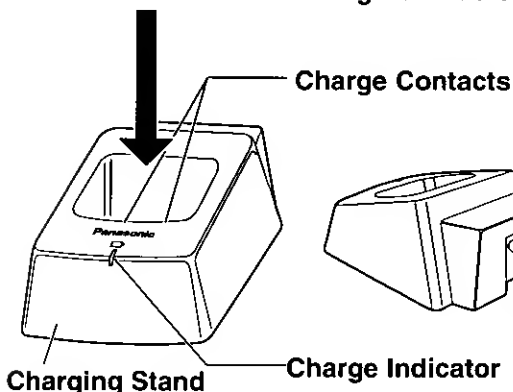

GETTING STARTED

INSTALLING AND CHARGING THE BATTERY

 ▶ Installing a Battery



Hook the bottom of the battery on the handset, and place the battery in the handset until you hear a click.

▶ Charging the Battery

You need to charge the battery before initial use and when the battery strength becomes low.

Slide the battery-attached handset in the charging stand (see page 5).


Charge the battery for about 1.5 hours. When charging is completed, the charge indicator will change from red to green.

▶ Standard Battery Life

If your Panasonic battery is fully charged [at 25°C (77°F)]:

In Talk mode	Up to about 4 hours
In Stand-by mode	Up to about 50 hours

NOTE:

- When the battery strength becomes low, beep tones sound every fifteen seconds and battery low indicator () appears on the LCD. During a conversation, the call will hang up automatically within five minutes. In these cases, recharge the battery.
- If the charge indicator is green, even before charging the battery, remove the battery and reinsert it after 5 seconds.
- The battery power is used even while the handset's power is OFF.
- Battery life may vary depending on usage conditions and ambient temperature.
- Please use only a Panasonic KX-A276 battery (see page 34).

CAUTION:

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Dispose of used batteries according to the manufacturer's instructions.

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

GETTING STARTED

LOCATION OF CONTROLS AND CONNECTION FOR THE BASE UNIT

► Base Unit

1 Connect as shown.

2 Raise the antenna.

Locator key:

Used to locate the handset.


DIALING MODE Selector:

When in the SLT mode, setting is necessary.
If your telephone line has touch tone service, set to "TONE".
If it has rotary service, set to "PULSE".

CONNECTION MODE Selector:

If connected to a Telephone Line Jack or a PBX, except for Panasonic KX-T, KX-TA or KX-TD series, set to "SLT".
If this unit is connected to Panasonic KX-T, KX-TA or KX-TD series, set to "EMSS".

Fasten the AC adaptor cord to the cord holder.

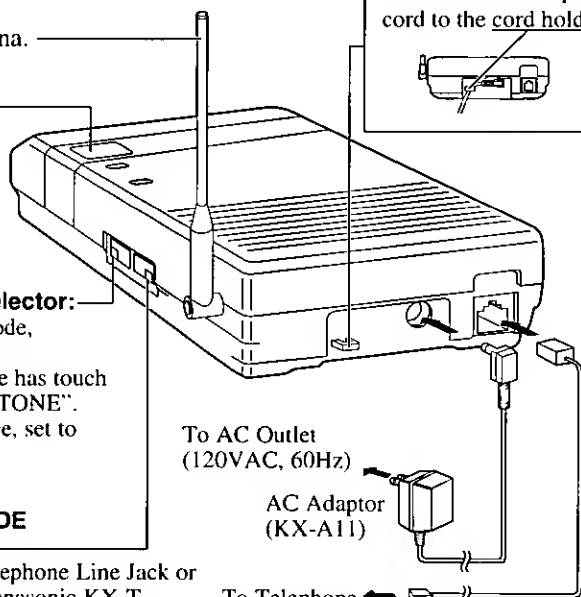

To AC Outlet
(120VAC, 60Hz)

AC Adaptor
(KX-A11)

To Telephone
Line Jack (RJ14C)
or PBX.

Telephone Line Cord

THE AC OUTLET POWER SOCKET SHOULD BE LOCATED NEAR THIS EQUIPMENT AND BE EASILY ACCESSIBLE.


Note:

- USE ONLY Panasonic AC ADAPTOR KX-A11. The adaptor must remain connected at all times.
- The AC adaptor may feel warm during use. This is normal.
- The unit will not function during a power failure.
- This unit cannot be connected in parallel with a single line telephone.
- If the unit does not operate after connecting the AC Adaptor to the AC Outlet, disconnect the AC Adaptor once and re-insert it.

GETTING STARTED

BEFORE USING KX-T7885 IN EMSS MODE

This unit does not have speaker phone and monitor features. Therefore please take care of the following contents before using KX-T7885 in EMSS mode. Please refer to your PBX Manual for more information.

Alternative Calling -Ring/Voice	This unit cannot receive alternative voice call. Please inform another extension user not to use voice calling.
Live Call Screening	Hands Free Mode: LCS hands free mode is not available on this unit. Please set to private mode only, by station programming. To change the setting, please refer to the manual of your PBX. Private Mode: In this mode the user can monitor or answer the call. 1) To monitor the call Press  when hearing alert tone. 2) To answer the call Press LCS key* when monitoring the call or hearing alert tone. * The LCS key has to be assigned on a Flexible Key before using this feature.
Back Ground Music	Back Ground Music is not available on this unit in spite of the BGM setting.
Parallel Connection	This unit cannot be connected in parallel with a single line telephone in EMSS mode. If the parallel connection mode of the PBX port is set to "Parallel ON (SLT ringing is enabled)", please set to " Parallel OFF (SLT ringing is disabled) ". Please refer to your PBX manual for more information.

GETTING STARTED

 
POWER ON/OFF

▶ Power ON


- 1 Turn the **POWER** switch OFF to ON.



The LCD shows the date and time of PBX or your extension number (EMSS mode only).



10 seconds later →

 


▶ Power OFF

- 1 Turn the **POWER** switch ON to OFF.



 Power Switch



- If the following display appears, send phone to your nearest authorized service center.


Need Repair N

(N=1 - 3)

GETTING STARTED

ABOUT THE LCD

The display has two lines with 16 characters per line, and related symbols to show information for call activities as shown below.

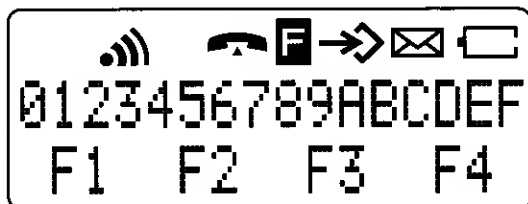

Description of Symbols



Intercom Indicator



In the Programming mode



In Use status



Message Waiting notification
(You have a message.)



In the Function mode



Battery Low Indicator

NOTE:

- When you press **(LCD)** in on-hook status, the LCD shows the date and time of PBX or your extension number for 10 seconds.

(On-hook display) (EMSS mode only)

How to change the LCD depends on your PBX. Please refer to your PBX manual for more information.

- Press **(LCD)**.

The date and time (day/month/time) of PBX are displayed.

TUE	MAY16	12:00P
F1	F2	F3 F4

- Press **(*)**.

Your extension number is displayed.

123:	ABCDEFGHIJ
F1	F2 F3 F4

- Press **(*)**.

The date and time (day/month/time) of PBX are displayed.

TUE	MAY16	12:00P
F1	F2	F3 F4

- The PBX information disappears after 10 seconds.

F1	F2	F3 F4
----	----	-------

- The LCD also shows Flexible Key Name.



- Press **(FUNC)** first, then **✓** or **△** (see page 29).

TUE MAY16 12:00P	TUE MAY16 12:00P	TUE MAY16 12:00P
F1 F2 F3 F4	F5 F6 F7 F8	F9 F10 F11 F12

CONTROLLING THE VOLUME

► Ringer Volume Adjustment

The ringer volume has three levels (low / middle / high). Moreover, you can select the Step Ringer mode, Vibrator mode or Off mode. [Default: middle]

- 1** Press  or  repeatedly to select the desired mode.
- Step Ringer mode: Rings progressively louder.
 - Vibrator mode: The handset does not ring but vibrates.
 - Off mode: The handset does not ring or vibrate. Only the indicator flashes green.

Ringer Volume
=High

High

Ringer Volume
=Middle

Middle

Ringer Volume
=Low


Low

Ringer Volume
=Step

Step Ringer mode

Ringer Volume
=Vibrate

Vibrator mode

Press  for more than 2 seconds.





Ringer Volume
=Off

Off mode

NOTE:

- If you select Vibrator mode, the display will show "Vibrate" while the handset is idle.*
- If you select Off mode, the display will show "Ringer OFF" while the handset is idle.*
- *This is unavailable when FWD/DND is set.

This information will not display in the following cases:

- While LCD shows your extension number or time
- While LCD shows duration time after finishing the conversation
- When charging, the handset always rings for incoming calls (except in Off mode).
- In addition to the above, the Vibrator and Ringer mode (vibrates several times and then starts to ring) is available. Refer to "Vibrator and Ringer" in Handset Programming (see page 28).
- When you set  and  to "F-Key Select", you can select ringer volume by pressing **(FUNC)** first, then  or  (see page 29).

Vibrate
F1 F2 F3 F4

Ringer OFF
F1 F2 F3 F4

▶ Receiver/Headset Volume Adjustment

The receiver volume has three levels (low/middle/high).

This can be changed during a conversation.

[Default: middle]

■ Receiver Volume

Press **✓** or **△** repeatedly during a conversation.

Receiver Volume
=High
High

Receiver Volume
=Middle
Middle

Receiver Volume
=Low
Low

■ Headset Volume

Press **✓** or **△** repeatedly during a conversation.

Headset Volume
=High
High

Headset Volume
=Middle
Middle

Headset Volume
=Low
Low

NOTE:

- When you set **✓** and **△** to “F-Key Select”, you can select receiver or headset volume by pressing **(FUNC)** first, then **✓** or **△** (see page 29).
- You can change the receiver volume when you are not using a headset.
- You can change the headset volume when using a headset.

MAKING CALLS

CALLING

► In EMSS mode

■ Intercom Calling

1 Press  or .

 


2 Dial the extension number.



3 Talk.

4 Press  after finishing the conversation.




■ Outside Dialing, Line Access


1 Press  (Flexible CO) or  then line access number.




 2 Dial the phone number.




3 Talk.

 4 Press  after finishing the conversation.




► In SLT mode

  
1 Press .




 
2 Dial the phone number.



3 Talk.







4 Press  after finishing the conversation.



(Continued)


MAKING CALLS

 
NOTE:

- You can also enter the phone number first and then press **(INT.)**,  or **F1/F12**. (**Predialing**) (In SLT mode,  button only)
- Predialing is unavailable in the following cases:
 - While LCD shows your extension number or time
 - While LCD shows duration time after finishing the conversation
- Press **(OFF)** before entering the phone number in these cases.
- You can change the dialing mode temporarily from pulse to tone during a call in SLT mode. Press **(TONE)** to change the dialing mode.
- You can select the display of Flexible Key by pressing **(FUNC)** first, then  or  (see page 29).
- Inserting a pause prevents misdialing. A pause can be inserted when you predial or while storing a number for memory dialing. Press **(FUNC)** then **(PAUSE)** to insert a pause.
- When you press **(LCD)**, the display of proprietary telephone appears on your display. (**LCD Refresh**) You can refresh the LCD while idle and talking. (EMSS mode only)
- To confirm the connection mode, see page 7, "CONNECTION MODE Selector".


DIALING THE LAST NUMBER YOU DIALED (LAST NUMBER REDIAL)

This unit automatically saves the last number you dialed.


1 Press .



2 Press **(REDIAL)**.

 

 3 Press **(OFF)** after finishing the conversation.



MAKING CALLS

SPEED DIALING

You can use the dial keys as Speed Dialing keys, and the stored number is dialed automatically by pressing Speed Dialing keys.

▶ Storing

- 1 Enter Station Programming Mode.
• To enter the Programming mode, see page 26.

→
Select F-Key
F1 F2 F3 F4

- 2 Enter speed dialing number ((**0**) - (**9**)).

Auto 1

- 3 Enter a phone number (up to 20 digits).
• The valid characters are (**0**) through (**9**),
(*****), (**#**), Pause Button (**FUNC** ▶ **1**) and
Flash Button (**FUNC** ▶ **5**).
• You can clear all digits by pressing **CLR**.

0123456789
Auto 1

- 4 Press **STORE** **AUTO**.

→
0123456789
Auto 1 Stored

- 5 To store another number, press (**HOLD**) then repeat steps 2 through 4.

- 6 To exit, press (**OFF**).

F1 F2 F3 F4

▶ Dialing

- 1 Press **CALL**.

- 2 Press **AUTO** and dial a speed dialing number
(**0** - **9**).

1
F1 F2 F3 F4

 


0123456789
F1 F2 F3 F4

NOTE:

- You can use this feature only in SLT mode. To confirm the mode, see page 7, “CONNECTION MODE Selector”.


MAKING CALLS

ONE-TOUCH DIALING


The stored number is dialed automatically by pressing a  (Flexible Key),  or  which is assigned as a one-touch dialing button.




 ▶ Storing

   
- 1 Enter Station Programming Mode.
• To enter the Programming mode, see page 26.





 

 









 - 2 Press  or  until the desired F-Key appears.





- 3 Press the desired  (Flexible Key),  or .





- The valid characters are  through , , , Pause Button (  ) and Flash Button (  ).
- You can press ,  or  to select another Flexible Key.

 
- 4 Enter a phone number (up to 20 digits).
• You can clear all digits by pressing .




- 5 Press .

  
 





- 6 To store another number, press  then repeat steps 2 through 5.

- 7 To exit, press .






▶ Dialing

 - 1 Press .
- 2 Press an available one-touch key (, , ).



NOTE:

  - You can use this feature only in SLT mode. To confirm the mode, see page 7, “CONNECTION MODE Selector”.
-  and  can be also assigned as a Full one-touch dialing button which you can press directly without pressing .

RECEIVING CALLS



IN EMSS MODE

► Intercom Incoming Call



Your handset will ring or vibrate and the call indicator will flash green when a call is received.


1 Press  or .

2 Press  after finishing the conversation.

			
123: ABCDEFGHIJ			
F1	F2	F3	F4

 
► CO Incoming Call


1 Press the flashing  (Flexible CO) or .

2 Press  after finishing the conversation.

CO01: 1234567890			
F1	F2	F3	F4

IN SLT MODE

1 Press .

2 Press  after finishing the conversation.


0:00:00			
F1	F2	F3	F4

NOTE:

- When you receive an intercom call, the extension number and name of the receiving call appear on the display.

123: ABCDEFGHIJ			
F1	F2	F3	F4
- When you receive a CO call, the CO line number or name of the receiving call appears on the display.

CO01: 1234567890			
F1	F2	F3	F4
- When you receive a call in SLT mode, “Receiving” appears on the display.

Receiving			
F1	F2	F3	F4
-  (Message Waiting notification) on the display lets you know that a call has been received. To call back, see page 21. (EMSS mode only)
- To confirm the connection mode, see page 7, “**CONNECTION MODE Selector**”.
- You can also answer the call by pulling out the handset from the charging stand.

DURING A CONVERSATION

PLACING A CALL ON HOLD


You can place a call on hold.

- 1 Press **(HOLD)** during a conversation.

■ To retrieve a call on hold

Press the flashing **F1-F12** or **(INT.)**.

 
NOTE:

- In SLT mode, press  to retrieve a call on hold. To confirm the mode, see page 7 “CONNECTION MODE Selector”.


THREE-PARTY CONVERSATION (CONFERENCE)

You can make a three-party conversation. The operations shown below are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 42-45) or the connecting system manual.


- 1 Press **(FUNC)** then **CONF** during a conversation.



- 2 Dial the third party's number.

 

 - 3 Press **(FUNC)** then **CONF** after the third party answers.



NOTE:


- You can use this feature only in EMSS mode. To confirm the mode, see page 7, “CONNECTION MODE Selector”.

 
DURING A CONVERSATION

TRANSFERRING A CALL


You can transfer a call to another extension or an outside party. The operations shown below are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 42-45) or the connecting system manual.

▶ Transferring a call to an extension


1 Press  during a conversation.




2 Dial the extension number.

 


3 Press .

 


▶ Transferring a call to an outside line

 
1 Press  during a conversation.



2 Press  and dial the phone number.

 

3 Press .

 

This feature must be enabled by PBX programming.

NOTE:

- You can use this feature only in EMSS mode. To confirm the mode, see page 7, “CONNECTION MODE Selector”.

MESSAGE WAITING

LEAVING A CALL NOTIFICATION

When the called extension is busy or does not answer, you can leave a notification to have the called extension call you back. The operations shown below are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 42-45) or the connecting system manual.

▶ To leave a notification


- 1 Press **FUNC** then **MSG DEF 3** when the called extension is busy or does not answer.

MW at Ext101			
F5	F6	F7	F8

- 2 Confirmation tone

- 3 Press **OFF**.

▶ To leave/cancel a notification

- 1 Press .

- 2 Press **PORT 7** **OPEN 0** **1** to set.
Press **PORT 7** **OPEN 0** **OPEN 0** to cancel.

- 3 Dial an extension number.


- 4 Press **OFF**.

NOTE:


- You can use this feature only in EMSS mode. To confirm the mode, see page 7, "CONNECTION MODE Selector".

MESSAGE WAITING

CALL BACK WHEN YOU RECEIVE A NOTIFICATION

 
 
 (Message Waiting Notification) on the display lets you know that a call has been received. The operations shown below are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 42-45) or the connecting system manual.

▶ To call back


1 Press .

2 Press  then .

3 An extension number appears on the display and the unit call back automatically.




▶ To clear all notifications

1 Press .

2 Press   .

3 Dial your own extension number.

4 Press .


NOTE:

- You can use this feature only in EMSS mode. To confirm the mode, see page 7, “CONNECTION MODE Selector”.

FORWARDING YOUR CALLS (CALL FORWARDING [FWD])







Specified calls to your telephone are automatically forwarded to another preset extension. The operations shown below are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 42-45) or the connecting system manual.

▷ Setting




1 Press .


2 Press **(FUNC)** then .

3 Enter a feature number.

-  : All Calls
-  : Busy
-  : No Answer
-  : Busy/No Answer
-  : To an outside line
-  : Follow Me

4 Dial an extension number.

- If you select  in step 3, dial line access code, phone number then .
- If you select  in step 3, dial your own extension number.

			
FWD (ALL)	Ext101		
F1	F2	F3	F4

5 Press .


NOTE:

– If FWD is set, the display will flash “FWD/DND” while the handset is idle.*



*This information will not display in the following cases:


- While LCD shows your extension number or time
- While LCD shows duration time after finishing the conversation


► Canceling

1 Press .

2 Press **FUNC** then .

3 Enter a feature number.
—  : Cancel
—  : Cancel Follow Me

			
FWD/DND Cancel			
F1	F2	F3	F4

4 If you select  in step 3, dial your own extension number.

5 Press .

NOTE:


- You can use this feature only in EMSS mode. To confirm the mode, see page 7, “CONNECTION MODE Selector”.

USEFUL FEATURES

PREVENTING OTHERS FROM DISTURBING YOU (Do Not Disturb [DND])

Allows you to prevent other parties from disturbing you. Your extension does not receive intercom or CO calls. The operations shown below are available when you connect to KX-TD500. If you connect to another system, refer to Features List (pages 42-45) or the connecting system manual.

 
▶ Setting

1 Press .


2 Press **FUNC** then .

3 Press **1**.

4 Press **OFF**.




▶ Canceling

1 Press .

2 Press **FUNC** then .

3 Press **0**.

 4 Press **OFF**.



NOTE:

- You can use this feature only in EMSS mode. To confirm the mode, see page 7, “**CONNECTION MODE Selector**”.
- If DND is set, the display will show “FWD/DND” while the handset is idle.*
 - *This information will not display in the following cases:
 - While LCD shows your extension number or time
 - While LCD shows duration time after finishing the conversation

USEFUL FEATURES

FLASH

You can disconnect the current call and make another call.

- 1 Press **FUNC** then **FLASH 5** while hearing any tone, dialing or talking.
- 2 Make another call.

NOTE:

- You can use this feature only in EMSS mode. In SLT mode, this operation also functions as a hooking signal which is used to access special features offered by a PBX or Central Office.
- To confirm the mode, see page 7 “CONNECTION MODE Selector”.

KEY LOCK

You can lock the buttons (In idle status only).

▷ Setting (ON)


- 1 Press **FUNC** KEYLOCK for 1 second while idle.

Keylock ON			
F1	F2	F3	F4

▷ Canceling (OFF)

- 1 Press **FUNC** KEYLOCK for 1 second while idle.

NOTE:

- During the Key Lock mode, all buttons except **FUNC** KEYLOCK will not work in this status. However, you can answer the calls by pressing **INT.**  or flashing **F1-F12** and press any key when the unit is not in idle status.
 - Key lock setting/canceling is unavailable in the following cases:
 - While LCD shows your extension number or time
 - While LCD shows duration time after finishing the conversation
- Press **OFF** before pressing **FUNC** KEYLOCK in these cases.

STATION PROGRAMMING

STATION PROGRAMMING IN SLT MODE

You have to enter this programming mode when you store telephone numbers for Speed Dialing and One-touch Dialing (see pages 15-16).

▶ To enter Station Programming mode

1 Press **FUNC** then **PROG OFF/D**.

→			
Handset Program			
F1	F2	F3	F4

2 Press **SELECT LCD**.

→			
Station Program			
F1	F2	F3	F4

3 Press **STORE AUTO**.

→			
Select F-key			
F1	F2	F3	F4

4 To exit, press **OFF**.

PBX STATION PROGRAMMING

PBX Station Programming allows you to program certain features of PBX from your telephone individually in EMSS mode. To program, you need to enter the PBX Station Programming mode. And during the programming mode, your handset is put in busy condition to caller. If you want to make a normal call handling operation, you should finish the programming mode. The features you can program depend on your PBX system. For details, please refer to the manual of your PBX.

▶ To enter PBX Station Program mode

1 Press **FUNC** then **PROG OFF/D**.

→			
Handset Program			
F1	F2	F3	F4

2 Press **SELECT LCD**.

→			
Station Program			
F1	F2	F3	F4

3 Press **STORE AUTO**.

→			
PT-PGM Mode			
F1	F2	F3	F4

4 To exit, press **OFF**.

PROGRAMMING INSTRUCTIONS

You can change the default settings or programming of handset according to your needs. The possible programmings are shown below in order they are displayed. For programming operations, see pages 28 to 32.

▶ To enter the Handset Programming Mode

1 Press **FUNC** then **PROG**.

→			
Handset Program			
F1	F2	F3	F4

2 Press **STORE** **AUTO**.

Vibrator&Ringer
=Off

3 Select the menu by pressing **←*** or ***→**.

Ringer Pattern
=1

4 To exit, press **OFF**.

F1	F2	F3	F4
----	----	----	----

NOTE:

- If you receive a call while programming, the unit quits the programming mode.
- The unit returns to idle status if you do not program within 30 seconds. Do not pause for over 30 seconds while programming.

▶ The possible programmings

- Vibrator and Ringer (see page 28)
- Ringer Pattern Selection (see page 28)
- Key Click Tone Set (see page 29)
- Up/Down Key Assignment (see page 29)
- Automatic Flexible Key Selection (see page 30)
- LCD Contrast (see page 30)
- Back Light (see page 31)
- Flexible Key Name Set (see page 32)

HANDSET PROGRAMMING

VIBRATOR AND RINGER

When a call is received, your handset vibrates four times and then starts to ring.

[Default: Off]

- 1 Enter the Handset Programming mode and select "Vibrator and Ringer" menu by pressing **[**]** or **[*#]**.
Vibrator&Ringer
=Off
- 2 Press **[SELECT LCD]**.
Vibrator&Ringer
=On
- 3 Press **[**]** or **[*#]** to program other items.
- 4 To exit, press **[OFF]**.

RINGER PATTERN SELECTION

You can select the ringer type (1 through 6) for receiving calls.

[Default: 1]

- 1 Enter the Handset Programming mode and select "Ringer Pattern" menu by pressing **[**]** or **[*#]**.
Ringer Pattern
=1
- 2 Press **[SELECT LCD]** or **[1] - [6]**.
Ringer Pattern
=2
• When you press **[SELECT LCD]**, the next ringer pattern appears on the display.
- 3 Press **[**]** or **[*#]** to program other items.
- 4 To exit, press **[OFF]**.

HANDSET PROGRAMMING

KEY CLICK TONE SET

You can turn off the key tone which is heard when any button on your handset is pressed. **[Default: On]**

- 1** Enter the Handset Programming mode and select "Key Click" menu by pressing **(*)** or **(*)**.

Key Click
=On

- 2** Press **(SELECT LCD)**.

Key Click
=Off

- 3** Press **(*)** or **(*)** to program other items.

- 4** To exit, press **(OFF)**.

UP/DOWN KEY ASSIGNMENT

You can set **(V)** and **(A)** to "Volume" key or "F-Key Select" key. **[Default: Volume]**

- 1** Enter the Handset Programming mode and select "Vol Key Assign" menu by pressing **(*)** or **(*)**.

Vol Key Assign
=Volume

- 2** Press **(SELECT LCD)**.

Vol Key Assign
=F-Key Select

- 3** Press **(*)** or **(*)** to program other items.

- 4** To exit, press **(OFF)**.

NOTE:

- When you set **(V)** and **(A)** to Volume, press **(FUNC)** then **(V)** or **(A)** to F-Key Select.
- When you set **(V)** and **(A)** to F-Key Select, press **(FUNC)** then **(V)** or **(A)** to select Volume.

HANDSET PROGRAMMING

AUTOMATIC FLEXIBLE KEY SELECTION

When making or answering a call, you can see the green F-Key automatically on the display. [Default: Off]

- 1 Enter the Handset Programming mode and select "Auto Fkey Select" menu by pressing **(*)** or **(*)**.
Auto FKey Select
=Off
- 2 Press **(SELECT LCD)**.
Auto FKey Select
=On
- 3 Press **(*)** or **(*)** to program other items.
- 4 To exit, press **(OFF)**.

NOTE: _____

– This feature is unavailable in SLT mode.

LCD CONTRAST

You can adjust the display contrast as desired. There are three contrast levels; Low, Middle and High. [Default: High]

- 1 Enter the Handset Programming mode and select "LCD Contrast" menu by pressing **(*)** or **(*)**.
LCD Contrast
=High
- 2 Press **(SELECT LCD)** until the desired setting is displayed.
LCD Contrast
=Low
LCD Contrast
=Middle
- 3 Press **(*)** or **(*)** to program other items.
- 4 To exit, press **(OFF)**.

HANDSET PROGRAMMING

BACK LIGHT

You can turn off the LCD and keypad back lights to conserve battery energy.
[Default: On]

- 1 Enter the Handset Programming mode and select "Back Light" menu by pressing **Ⓜ*** or **Ⓜ□** .

Back Light
=On

- 2 Press **SELECT**
LCD .

Back Light
=Off

- 3 Press **Ⓜ*** or **Ⓜ□** to program other items.

- 4 To exit, press **OFF** .

HANDSET PROGRAMMING

FLEXIBLE KEY NAME SET

You can name the 12 F-keys (three characters max per a key).

[Default: FXX (XX=1-12)]

- 1 Enter the Handset Programming mode and select "F-Key Name Set" menu by pressing **(A*)** or **(END)**.

F-Key Name Set
F1 F2 F3 F4
- 2 Press **(V)** or **(A)** and show the F-Key you want to name on the display.

F-Key Name Set
F5 F6 F7 F8
- 3 Press **(F1-F12)** or **(SELECT LCD)** to chose the F-Key you want.

F-Key Name Set
F1 =F1
- 4 Press **(X*)**.

F-Key Name Set
F1 =
- 5 Enter the name.

F-Key Name Set
F1 =C
- 6 When you finish, press **(STORE AUTO)**.
 → the next F-Key appears on the display.

F-Key Name Set
F1 =C01 Stored

► Character Combination Table

Dialing buttons can be used as letters and symbols for character input keys. Use **(END)** (Next) or **(A*)** (Previous) to move the cursor to change or enter a character.

	Number of pressing times								
Keys	1	2	3	4	5	6	7	8	9
1	.	,	:	!					
2	A	B	C	a	b	c	2		
3	D	E	F	d	e	f	3		
4	G	H	I	g	h	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9
0	(space)	-	*	#	&	\$	()	0

NOTE:

- Three space characters cannot be stored.

 


WALL MOUNTING

The base unit can be mounted on a wall.

- 1 Drill two holes spaced 8.4 cm (3.3 inches) apart and install two screws.


- 2 Insert the tabs of the wall mounting plate (included) into the openings of the base unit, then push it in the direction of the arrow.

- 3 Mount the base unit on the wall.

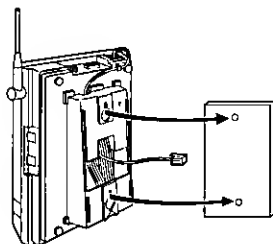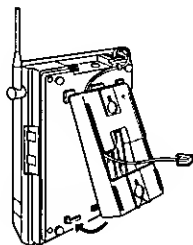


INSTALLING THE HANDSET CLIP

You can hang the handset on your belt or pocket by attaching the handset clip.

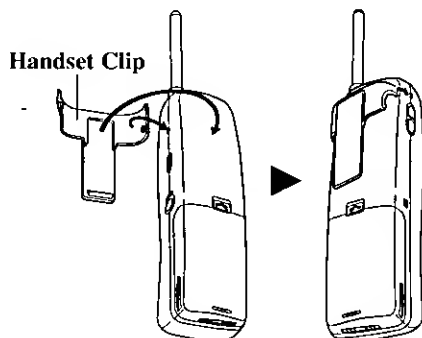


REPLACING THE BATTERY

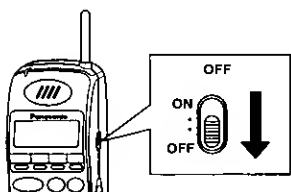

1 Set the **POWER** switch to "OFF" to prevent memory loss.


2 While pressing the open-button, remove the battery.

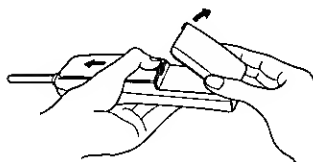

3 Hook the bottom of the battery on the handset, and place the battery in the handset until you hear a click.

4 Set the **POWER** switch to "ON."


Installing the Panasonic KX-A276 battery:

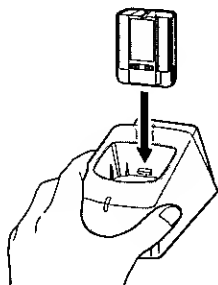

While holding the charging stand with one hand, push the battery in with the other hand until you hear a click.

When removing the battery, be sure to hold the stand.

 
NOTE:

- If you do not replace the battery within five minutes, memory (e.g. Redial data in SLT mode, Flexible key position – F1-F4/F5-F8/F9-F12) may be lost.
- If beep tones sound every fifteen seconds and battery low indicator () flashes after a few telephone calls even when the handset battery has been fully charged, it is time to install a new battery. Remember to charge the new battery before use.
- If you change the battery while on the phone, hold the call first.

LOCATING THE HANDSET FROM THE BASE UNIT


This feature helps you find the handset if misplaced. You may also locate a person at the handset from the base unit by emitting beep tones for 60 seconds. If the handset is in use, locating is not available.

- 1 Press **LOCATOR** button on the base unit.

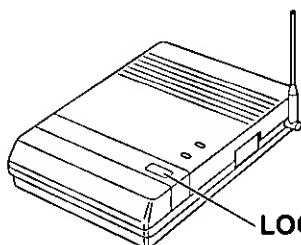




The **IN USE** indicator flashes and the handset beeps.
To stop the beeping, press **LOCATOR** button again.

Helpful Hint:

Pressing  on the handset stops the beeping and the **IN USE** indicator on the base unit changes from flashing to a steady light.

TROUBLESHOOTING

Trouble	Remedy
The unit does not work.	<ul style="list-style-type: none"> Set the POWER switch to "ON." The unit was not connected properly (see pages 5 and 7). The handset battery is weak. Charge the battery fully.
Sound flutters or fades.	<ul style="list-style-type: none"> You are too far from the base unit. Move closer to the base unit. Raise the base unit antenna.
Noise occurs.	<ul style="list-style-type: none"> Place the base unit away from office equipment such as computers. Approach the base unit.
I am encountering interference from another unit.	<ul style="list-style-type: none"> Set the handset and the base unit away from other electrical appliances. Press CH Button ((FUNC)  (CH 8)) during a conversation.
I pressed the CH Button, but still have a noise.	<ul style="list-style-type: none"> Approach the base unit. Press CH Button ((FUNC)  (CH 8)) again.
The handset does not ring.	<ul style="list-style-type: none"> Set the POWER switch to "ON." Change the ringer volume level.
Beep tones sound every fifteen seconds during a conversation.	<ul style="list-style-type: none"> Charge the battery fully, or replace the new handset battery.
I charged the battery for 1.5 hours, but the beep tones sound every fifteen seconds and battery low indicator () flashes after a few telephone calls.	<ul style="list-style-type: none"> Clean the battery charge contacts and charge once more. It is time to change the battery. Replace with a new one.
I cannot use the unit during a power failure.	<ul style="list-style-type: none"> The unit will not function during a power failure.
I cannot store a phone number into memory.	<ul style="list-style-type: none"> Do not pause for over 30 seconds while storing.
While operating the unit, the AC adaptor feels warm. While charging the battery, the unit feels warm.	<ul style="list-style-type: none"> These are normal conditions.
I cannot make a call from a paralleled single line telephone.	<ul style="list-style-type: none"> A single line telephone cannot be connected in parallel with this unit in EMSS mode (see page 8).

IMPORTANT SAFETY INSTRUCTIONS

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicer when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the AC outlet and refer servicing to an authorized servicer when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicer.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

CAUTION

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

FCC Information

If requested by the telephone company, inform them as follows.

- FCC Registration No.:
(found on the bottom of the unit)
- Ringer Equivalence: 0.2B
- The particular telephone line to which the equipment is connected.

This unit must not be connected to a coin operated line. If you are on a party line, check with your local telephone company.

Ringer Equivalence Number (REN):

The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

In the event terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service providing that they:

- a) Promptly notify the customer.
- b) Give the customer an opportunity to correct the problem with their equipment.
- c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

The Telephone Company may make changes in its communications facilities, equipment, operations, or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68.

If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

When programming emergency numbers and/or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Some wireless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.

Environment

Do not place the unit in rooms where the temperature is less than 5°C (41°F) or greater than 40°C (104°F).

Allow 10 cm (4") clearance around the unit for proper ventilation.

Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight. Keep away magnetic cards, such as bank cards, telephone cards, etc. from the handset, as the magnet in the handset may cause the data on the card's magnetic strip to be erased.

Consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF energy.

Do not use the unit in health care facilities when any regulations posted in the area instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Routine care — wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.

When you left the unit unused for long time, unplug the AC adaptor from the outlet.

If there is any trouble — disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Servicenter. If the known working phone does not operate properly, consult with your telephone company.

Hearing Aid Compatibility

This telephone provides magnetic coupling for hearing aids.

Privacy of communications

Privacy of communications may not be ensured when using this phone.

For Product Service

- Panasonic Servicenters are listed in the servicer directory.
- Call 1-800-211-7262 for the location of an authorized servicer.

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.














Symptom

-
- Send the unit to an authorized servicer, prepaid and adequately insured.
 - Do not send your unit to the Panasonic Consumer Electronics Company listed on the back cover or to executive or regional sales offices. These locations do not repair consumer products.

FEATURES LIST














 


 

 



 














The features of the KX-TA624, KX-TD816/1232/308, KX-TD500 and KX-T336 are listed below. For more information, please refer to the manual of your PBX.

For the KX-TA624

Desired Function	Operation
Call Forwarding	 ► FUNC ► FWDNG ► MC2 ► <div style="border: 1px dashed black; padding: 5px; display: inline-block;"> <p>All Calls 1 ► extension no. ► END</p> <p>Busy/No Answer MC2 ► extension no. ► END</p> <p>To an outside line MC3 ► line access no. ► ► phone no. ► END</p> <p>Follow Me MC5 ► your extension no. ► END</p> <p>Cancel MC0 ► END</p> <p>Cancel Follow Me MC8 ► your extension no. ► END</p> </div> 
Call on Hold	<div> Holding  </div> <div style="border-left: 1px dashed black; padding-left: 10px;"> To retrieve a call on hold <div style="border: 1px solid black; padding: 2px; display: inline-block;"> F1-F12 INT4 </div> ► Talk </div>
Call Transfer	 ► <div style="border: 1px solid black; padding: 5px; display: inline-block;"> extension no. to an extension F1-F12 phone no. to an external party </div> ► Announce ► 
Conference	FUNC ► CONF ► MC4 ► third party's no. ► Talk ► FUNC ► CONF ► MC4
Do Not Disturb (DND)	 ► FUNC ► FWDNG ► MC2 ► <div style="border: 1px solid black; padding: 5px; display: inline-block;"> MC4 to set MC0 to cancel </div> ► END ► 
Message Waiting	<p>To leave a notification FUNC ► MC3 ► </p> <p>To cancel a notification  ► extension no. ► FUNC ► MC3 ► FUNC ► MC3 ► </p> <p>To check a message FUNC ► MC3</p> <p>To call back  ► FUNC ► MC3 ► Talk</p> <p>To clear all notifications  ► MC7 ► MC0 ► MC0 ► END ► </p>

FEATURES LIST

 For the KX-TD816/1232/308

Desired Function	Operation
Call Forwarding	 ► FUNC ►  ► All Calls ►  AC2 ► extension no. Busy  ► extension no. No Answer  ► extension no. Busy/No Answer  ► extension no. To an outside line  ► line access no. ►  ► phone no. ►  Follow Me  ► your extension no. Cancel  Cancel Follow Me  ► your extension no.
Call on Hold	Holding  To retrieve a call on hold  (F1-F12) ►  (INT.) ► Talk
Call Transfer	 ► extension no. to an extension  (F1-F12) ► phone no. to an external party ► Announce ► 
Conference	FUNC ►  ► third party's no. ► Talk ► FUNC ► 
Do Not Disturb (DND)	 ► FUNC ►  ► 1 to set  to cancel ► 
Message Waiting	To leave a notification FUNC ►  ►  To cancel a notification  ►  ►  ► extension no. ►  To check a message FUNC ►  To call back  ► FUNC ►  ► Talk To clear all notifications  ►  ►  ► your extension no. ► 



 

 




FEATURES LIST

For the KX-TD500

Desired Function	Operation
Call Forwarding	→ FUNC → ANC 2 → All Calls → OFF <div style="border: 1px dashed black; padding: 5px; margin: 5px;"> ANC 2 ▶ extension no. Busy BT 3 ▶ extension no. No Answer BT 4 ▶ extension no. Busy/No Answer BT 5 ▶ extension no. To an outside line BT 6 ▶ line access no. ▶ ▶ phone no. ▶ BT 11 Follow Me BT 7 ▶ your extension no. Cancel BT 0 Cancel Follow Me BT 8 ▶ your extension no. </div>
Call on Hold	Holding To retrieve a call on hold HOLD <div style="border: 1px solid black; padding: 5px; display: inline-block;"> F1-F12 </div> ▶ Talk <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-top: 5px;"> INT. 48 </div>
Call Transfer	EXT. CLP → [extension no. to an extension <div style="border: 1px solid black; padding: 5px; display: inline-block; margin: 5px;"> phone no. to an external party </div>] ▶ Announce ▶ OFF
Conference	FUNC → CON BT 4 ▶ third party's no. ▶ Talk ▶ FUNC → CON BT 4
Do Not Disturb (DND)	→ FUNC → FWDRDNC ANC 2 → [1 to set <div style="border: 1px solid black; padding: 5px; display: inline-block; margin: 5px;"> BT 0 to cancel </div>] ▶ OFF
Message Waiting	To leave a notification FUNC → MSG BT 3 ▶ OFF To cancel a notification ▶ MSG BT 7 BT 0 BT 0 ▶ extension no. ▶ OFF To check a message FUNC → MSG BT 3 To call back ▶ FUNC → MSG BT 3 ▶ Talk To clear all notifications ▶ MSG BT 7 BT 0 BT 0 ▶ your extension no. ▶ OFF

FEATURES LIST

For the KX-T336

Desired Function	Operation
Call Forwarding	 ► FUNC ► PRG/CHG ABC 2 ► <div style="border: 1px dashed black; padding: 5px; display: inline-block;"> <p>All Calls ABC 2 ► extension no. Busy/Off-Hook DEF 3 ► extension no. No Answer GHI 4 ► extension no. Busy/Off-Hook/No Answer JKL 6 ► extension no. To an outside line MNO 5 ► line access no. ► ► phone no. ► END Follow Me PQRS 7 ► your extension no. Cancel STUV 0 Cancel Follow Me WXYZ 8 ► your extension no.</p> </div> ► OFF
Call on Hold	Holding  To retrieve a call on hold F1-F12  ► Talk
Call Transfer	 ► <div style="display: inline-block; vertical-align: top;"> extension no. to an extension F1-F12  phone no. to an external party </div> ► Announce ► OFF
Conference	FUNC ► CONF GHI 4 ► third party's no. ► Talk ► FUNC ► CONF GHI 4
Do Not Disturb (DND)	 ► FUNC ► PRG/CHG ABC 2 ► <div style="display: inline-block; vertical-align: top;"> 1 to set STUV 0 to cancel </div> ► OFF
Message Waiting	<p>To leave a notification FUNC ► MSG DEF 3 ► OFF</p> <p>To cancel a notification  ► END WXYZ 9 ► extension no. ► OFF</p> <p>To check a message FUNC ► MSG DEF 3</p> <p>To call back  ► FUNC ► MSG DEF 3 ► Talk</p> <p>To clear all notifications  ► END WXYZ 9 ► your extension no. ► OFF</p>

For your future reference

SERIAL NO. _____ DATE OF PURCHASE _____
(found on the bottom of the unit)

NAME OF DEALER _____

DEALER'S ADDRESS _____

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infantería, Km.9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985



Printed in Japan

PSQX1739WA

KF0599MY3099